

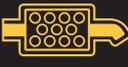 
SECTION	LIGHTS UP / FLASHES	WARNING ON-SCREEN MESSAGE	DESCRIPTION AND FUNCTION
FUEL 	Lights up	Refuel.	Go to the nearest petrol station and refuel as you are now using your fuel reserve.
COOLANT 	Lights up	<p>Low or high coolant level.</p> <p>Engine overheated. Stop the vehicle! Refer to the owner's manual.</p> <p>Check the coolant level!</p>	<p>Stop the car immediately, turn off the engine and allow it to cool – the engine is overheating because the coolant level is either too low or too high.</p> <p>After the engine has cooled, check the coolant level – if the coolant is at the prescribed level and the warning light comes on again, contact a service centre for assistance.</p>
ENGINE OIL  <hr/> 	Flashing	<p>Fault: oil pressure.</p> <p>Stop the vehicle!</p> <p>Refer to the owner's manual.</p>	<p>Stop the car immediately and turn off the engine – the oil pressure in the oil circuit has dropped.</p> <p>Check the engine oil level. If the quantity of oil is as it should be, but the warning light still continues to flash, do not continue driving and do not leave the engine running or idling. Contact a service centre for assistance.</p> <p>If the light is yellow: contact a service centre for assistance.</p>
BRAKES 	Lights up	<p>Check the brake fluid level.</p> <p>Refer to the owner's manual.</p>	Stop the vehicle, turn off the engine and check the brake fluid level, as it may have run too low.
	Lights up	Check the brake lining.	<p>Your brake lining has become worn.</p> <p>You may proceed with caution, but contact a service centre for assistance as soon as possible.</p>
SEAT BELT 	Lights up		Someone in the car has not fastened their seatbelt. They should fasten it immediately for their own safety and that of everyone else in the vehicle.

SECTION	LIGHTS UP / FLASHES	WARNING ON-SCREEN MESSAGE	DESCRIPTION AND FUNCTION	
AIRBAG 	Lights up	Fault: airbag OR Proactive passenger protection unavailable / feature restricted	This light warns of a fault in an airbag or in the proactive passenger protection system. In either case, you must proceed with caution and contact a service centre for assistance as soon as possible.	
			The front passenger airbag has been deactivated with the airbag switch. This warning light lights up for 4 seconds after the ignition is turned on.	
			Airbag / seat belt tensioner disabled.	One or more of the airbags or seat belt pretensioners switched off by the diagnostic device. This warning light lights up for 4 seconds after the ignition is turned on, then flashes for a further 12 seconds.
ESC/ASR 	Lights up	Traction control disabled.	Traction control has been disabled.	
		Flashing		The ESC or ASR stability control system is intervening.
		Lights up	Fault: ABS / traction control (ASR).	This light warns of a defect in the ESC or ASR stability control systems. You may proceed with caution, but contact a service centre promptly for assistance.
PARKING BRAKE 	Lights up	Parking brake on OR Fault: electric parking brake	This light informs you that the parking brake is on. However, if it is accompanied by the on-screen message "Fault: electric parking brake", contact a service centre for assistance.	
	 	Lights up	Parking brake: gradient too steep. Refer to the owner's manual.	You are parked on a slope that is too steep. Find a parking space where it is flat or the slope is gentler. If the light is green: Auto Hold is stopping the car from rolling.

SECTION	LIGHTS UP / FLASHES	WARNING ON-SCREEN MESSAGE	DESCRIPTION AND FUNCTION
TYRES 	Lights up	Check the air pressure in the tyres (+ information indicating which tyres to check).	<p>There has been a change in tyre pressure.</p> <p>Reduce speed immediately and avoid sudden changes in direction and heavy braking.</p> <p>Stop the vehicle, turn off the engine, and check the tyres and their pressure.</p> <p>If necessary, adjust the pressure in the relevant tyre or replace the wheel.</p>
			<p>A fault has occurred in the tyre pressure monitoring system.</p> <p>Stop the vehicle, turn off the ignition and restart the engine.</p> <p>If the warning light flashes again on starting the engine, there is a fault in the system.</p> <p>You may proceed with caution. Contact a service centre promptly for assistance.</p> <p>This light flashes for approximately 1 minute, then lights up.</p>
BRAKE PEDAL  	Lights up	Depress the brake pedal.	<p>The adaptive cruise control is insufficient to brake the car. Depress the brake pedal.</p> <p>If the light is green: Depress the brake pedal to shift the automatic transmission.</p>
ABS 	Lights up	Fault: ABS / traction control (ASR).	<p>A fault has occurred in the anti-lock braking system.</p> <p>You may proceed with caution. Contact a service centre promptly for assistance.</p>
LANE ASSIST  	Lights up		<p>Lane Assist is enabled, but not ready for intervention, e.g. because of insufficient road markings.</p> <p>If this light is green, Lane Assist is ready to intervene or is intervening.</p>

SECTION	LIGHTS UP / FLASHES	WARNING ON-SCREEN MESSAGE	DESCRIPTION AND FUNCTION
DIRECTION INDICATORS  	Flashing		<p>This light indicates that the trailer direction indicator is on.</p> <p>If a trailer is connected, but the warning light does not flash, the direction indicator on the trailer does not work. Check the bulbs on the trailer.</p>
	Flashing		Direction indicators on.
LIGHTS       	Lights up		Auto Light Assist on.
	Lights up		Full beam or optical horn on.
	Lights up		Dipped beam on.
	Lights up		Side marker lights on.
	Lights up		Front fog lights on.
	Lights up		Rear fog lights on.
	Lights up	Check the ... (+ information indicating which bulb is faulty).	One of the bulbs is damaged – replace the faulty bulb or contact a service centre.
STEERING  	Lights up		<p>Caution – there has been a general malfunction in the power steering (or, if the light is yellow, a partial fault has occurred).</p> <p>Turn off the ignition, restart the engine and travel a short distance. If the warning light does not go out, park the car. Do not continue driving. Contact a service centre for assistance.</p>
	Flashing	Faulty steering lock. Stop the car!	<p>Caution – a fault has occurred in the steering lock (KESSEY system).</p> <p>Immediately park the car. Do not continue driving. Once the ignition is switched off, it will no longer be possible to lock the steering, activate electrical appliances (e.g. the infotainment), turn on the ignition or start the engine. Contact a service centre for assistance.</p>

SECTION	LIGHTS UP / FLASHES	WARNING ON-SCREEN MESSAGE	DESCRIPTION AND FUNCTION
BATTERY  <hr/> 	Lights up	<p>The 12 V battery is not charging.</p> <p>Stop the vehicle!</p>	<p>Battery charging malfunction – the battery is not charging when the engine is running.</p> <p>If the engine oil warning also lights up while the vehicle is in use, stop driving – if you continue, you risk damaging the engine! Turn the engine off and contact a service centre for assistance.</p>
	Lights up	<p>The 12 V battery is low or flat. Recharge it by driving.</p>	<p>The battery is low or flat. Recharge it by driving.</p>
TRANSMISSION  <hr/>  <hr/>  <hr/>  <hr/> 	Lights up	<p>Transmission overheated.</p> <p>You may continue driving.</p>	<p>The transmission is overheated, but you may proceed with caution.</p>
	Lights up	<p>Transmission overheated.</p> <p>Stop the vehicle!</p> <p>Refer to the owner's manual.</p>	<p>The transmission is overheated. Do not continue driving! Stop the vehicle and turn off the engine.</p> <p>When the warning light goes out, you may continue driving.</p> <p>If the warning light does not go out, do not continue driving! Contact a service centre for assistance.</p>
	Lights up	<p>Faulty transmission.</p> <p>Stop the vehicle safely!</p>	<p>There is a fault in the transmission. Stop the vehicle and park it safely!</p>
	Lights up	<p>Transmission in emergency mode.</p> <p>You may continue driving.</p>	<p>The transmission has switched to emergency mode because a fault has been detected. You may proceed with caution. Contact a service centre promptly for assistance.</p>
	Lights up	<p>Fault: Transmission.</p> <p>You may continue driving.</p>	<p>Fault in the transmission. You may proceed with caution.</p>
ADBLUE  <hr/> 	Lights up	<p>Fault: AdBlue (DEF).</p> <p>The engine won't start.</p>	<p>AdBlue® fault (diesel engine).</p> <p>Contact a service centre for assistance.</p>
	Lights up	<p>Top up the AdBlue (DEF)!</p> <p>The engine won't start.</p>	<p>Low AdBlue® level (diesel engine).</p> <p>Top up the AdBlue®.</p>

SECTION	LIGHTS UP / FLASHES	WARNING ON-SCREEN MESSAGE	DESCRIPTION AND FUNCTION
ELECTRICAL SYSTEM 	Lights up	Fault: Electrical system. Stop the car! OR Fault: Electrical system. Service now!	Fault in the electrical system. Stop the car! Contact a service centre for assistance.
TOWING DEVICE 	Lights up	Make sure the towing device is properly secured.	Get out and check that the towing device is properly secured.
PARTICULATE FILTER 	Lights up	Particulate filter regeneration required. Refer to the owner's manual.	Particulate filter clogged. Clean the filter with a 15-minute drive under the following conditions. <ul style="list-style-type: none"> › Engage 4th or 5th gear (automatic transmission: D/S position). › Drive at a speed of at least 70 km/h › Engine speed range from 1,800 to 2,500 rpm
WASHER 	Lights up	Top up the washer fluid reservoir.	Low washer fluid reservoir level. Top up the washer fluid reservoir.
FRONT ASSIST 	Lights up		Vehicle safety distance warning. Maintain a safe distance from the moving vehicle in front.
	Lights up	Front Assist disabled.	Front Assist is disabled.
	Lights up	Front Assist sensor impaired.	Check the sensor for frost, dirt, etc.
	Lights up	Front Assist unavailable.	Front Assist is automatically deactivated when ESC Sport is enabled or when ASR is disabled. OR Front Assist unavailable. Stop the vehicle, turn off the engine and restart it. If the system is still inaccessible, contact a service centre for assistance.

SECTION	LIGHTS UP / FLASHES	WARNING ON-SCREEN MESSAGE	DESCRIPTION AND FUNCTION
EPC 	Lights up		<p>Electronic power control fault (petrol engine).</p> <p>You may proceed with caution, but contact a service centre promptly for assistance. The system allows you to drive in emergency mode – there may be a noticeable reduction in engine power.</p>
BLIND SPOT 	Lights up	Side Assist currently unavailable.	Lane change assist is unavailable.
REAR TRAFFIC ALERT 	Lights up	Parking Exit Assist currently unavailable.	Parking Exit Assist is unavailable.
STEERING WHEEL HEATING 	Lights up	Steering wheel heating is on.	Steering wheel heating is on.
SERVICE 	Lights up	Gas system inspection due! CNG operation disabled in ___ days.	<p>Contact a service centre and have the car's gas system checked.</p> <p>OR</p> <p>It is now time for a service. Contact a service centre.</p>
	Lights up	Service in ___.	It will soon be time for a service. Contact a service centre.
KESY 	Lights up	Faulty keyless system.	<p>Fault in the KESY starter system.</p> <p>Contact a service centre for assistance.</p>
		Key not detected in the car.	The KESY key has not been detected in the car.

SECTION	LIGHTS UP / FLASHES	WARNING ON-SCREEN MESSAGE	DESCRIPTION AND FUNCTION
ENGINE 	Flashing		Fault in the engine control system. The system allows you to drive in emergency mode – there may be a noticeable reduction in engine power.
	Lights up		If the warning light does not come on when the ignition is switched on, or if it lights up continuously, there may be a defect in the glow plug system. You may proceed with caution. Contact a service centre promptly for assistance.
		Lights up	Warning.
		Lights up	Serious threat.
		Lights up	Faulty exhaust gas control system. You may proceed with caution. Contact a service centre promptly for assistance.
EMERGENCY CALL SOS	Lights up	Emergency call function is restricted. Contact a service centre.	Faulty emergency call system. Contact a service centre for assistance.
		Lights up	Emergency call function is currently restricted. Refer to the owner's manual.
ECO 	Lights up		Stop/start – the engine has not automatically switched off.
		Lights up	Stop/start – the engine has automatically switched off and automatically restarts when the car starts moving again.
		Lights up	The car is in fuel-saving mode due to intervention by the system of active cylinder management because the automatic transmission is idling.

SECTION	LIGHTS UP / FLASHES	WARNING ON-SCREEN MESSAGE	DESCRIPTION AND FUNCTION
OFFROAD 	Lights up		Offroad driving mode activated.
	Lights up		Conditions for Offroad mode intervention are in place.
	Flashing		The hill descent assist is intervening.
DCC – ADAPTIVE CHASSIS 	Lights up	Fault: suspension.	Faulty adaptive chassis. Contact a service centre for assistance.
CRUISE CONTROL 	Lights up		Adaptive cruise control unavailable. Turn off the engine and restart it. If ACC remains inaccessible, contact a service centre for assistance.
	Lights up		Adaptive cruise control activated and vehicle detected.
	Lights up		Adaptive cruise control has been activated.
	Lights up		Car speed control via cruise control.
	Lights up		Cruise control activated.
	Lights up		Faulty cruise control. Contact a service centre for assistance.

SECTION	LIGHTS UP / FLASHES	WARNING ON-SCREEN MESSAGE	DESCRIPTION AND FUNCTION
SPEED LIMITER 	Lights up		Car speed control via the speed limiter.
	Flashing		Set speed limit has been exceeded.
!LIM	Lights up		Fault in the speed limiter control system.
TEMPERATURE 	Lights up	Outside temperature: ____.	Low outside temperature (below 4 °C). Adapt your driving to the ambient temperatures.
DRIVER ALERT 	Lights up and goes out	Fatigue detected.	Break recommended. Park safely and leave the car for more than 15 minutes.